

AA-5 SERIES
MAINTENANCE MANUAL

LIST OF CHAPTERS

<u>TITLE</u>	<u>CHAPTER NO.</u>
<u>AIRCRAFT GENERAL</u>	
Time Limits/Maintenance Check	5
Dimensions and Areas	6
Lifting and Shoring	7
Leveling and Weighing	8
Towing and Taxing	9
Parking and Mooring	10
Placards and Markings	11
Servicing	12
<u>AIRFRAME SYSTEMS</u>	
Standard Practices — Airframe	20
Air Conditioning	21
Auto Flight	22
Communications	23
Electrical Power	24
Equipment/Furnishings	25
Flight Controls	27
Fuel	28
Ice and Rain Protection	30
Landing Gear	32
Lights	33
Navigation	34
Vacuum	37
<u>STRUCTURE</u>	
Doors	52
Fuselage	53
Stabilizers	55
Windows	56

AA-5 SERIES
MAINTENANCE MANUAL

LIST OF CHAPTERS

<u>TITLE</u>	<u>CHAPTER NO.</u>
Wings	57
<u>PROPELLER</u>	
Propellers	61
<u>POWER PLANT</u>	
Power Plant General	71
Engine Fuel and Control	73
Ignition	74
Engine Indicating	77
Exhaust	78
Oil	79
Starting	80
<u>CHARTS</u>	
Charts	91